USER'S MANUAL

Read And Follow All Instructions For Use

PUMP FOAMER

nox-crete™

chemical solutions to concrete problems

www.nox-crete.com

Nox-Crete Products Group
1444 S. 20th St. | Omaha, NE 68108
(800) 669-2738 | (402) 341-2080
www.nox-crete.com

05/2014

nox-crete™
chemical solutions to concrete problems

INSTRUCTIONS - READ THOROUGHLY BEFORE USE

1. Unscrew the pump assembly (PUFPA-2) from the tank (PUF2-N-2).
2. Fill tank with desired amount of Product up to a MAXIMUM OF 1 GALLON. Do not dilute Product. Best foaming results are achieved if tank is filled to a maximum of 50% capacity.
3. Screw pump assembly back onto tank opening and tighten securely.
4. Twist the pump handle 1/3 of a turn counterclockwise to lock into place.
5. Using the handle, pump the unit approximately 30 times or until pumping becomes difficult. WARNING: If the unit is over pumped and has too much pressure it will release air pressure through the pressure relief valve (PUF-PRV-2).

MAINTENANCE & CARE

- The pump unit should be occasionally lubricated using white lithium grease. This should be done by placing the lubricant inside of the pump cylinder through the opening in the top of the cap. If pumping becomes difficult, additional lubrication may be necessary.
- Clean after each use by running clean water through the unit and rinsing all parts thoroughly.
- Over time, the wadding may become plugged with sediment or debris, reducing the quality and amount of foam produced. Follow the instructions below to replace the wadding.

CHANGING WADDING IN SPRAY GUN AND WAND

FIG. 1 - Unthread poly wand from spray gun.
FIG. 2 - Remove the white wadding in the poly wand *(WAAD-.625)* and dispose.
FIG. 3 - Remove washer *(PSG75W)* in spray gun. The washer is reusable as long as it is in good shape.
FIG. 4 - Remove white wadding from spray gun *(WAAD-.5)* and dispose.
FIG. 5 - Insert new wadding *(WAAD-.5)* and place washer *(PSG75W)* into spray gun.
FIG. 6 - Insert new wadding in poly wand *(WAAD-.625)*.
FIG. 7 - Attach poly wand onto spray gun.

FIG. 1

FIG. 4

FIG. 2

FIG. 5

FIG. 3

FIG. 6

FIG. 7

PARTS LIST/SCHEMATIC

Contact Nox-Crete for replacement parts and service.
(800) 669-2738 | (402) 341-2080 | www.nox-crete.com
1444 S. 20th St., | Omaha, NE 68108 | USA

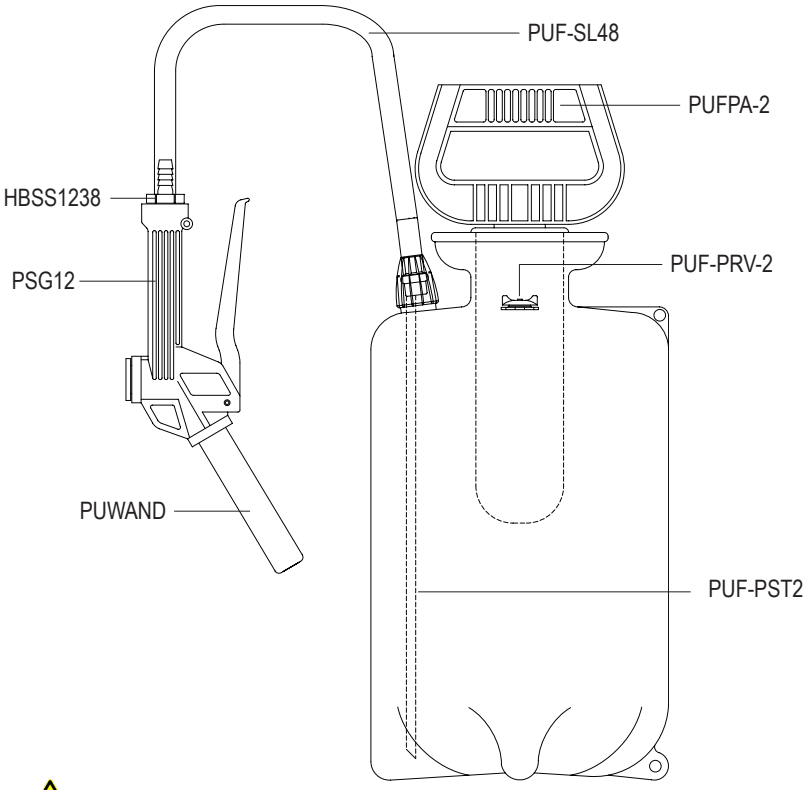

Part No.	Description
HBSS1238	Stainless Hose Barb
PSG12	1/2" Inch Poly Spray Gun And Handle
PSGORV	VITON® O-Ring For Spray Gun (PSG12)
PSG75W	Washer
PUF2-N-2	2 Gallon Tank
PUFPA-2	Pump Assembly
PUF-PRV-2	Pressure Relief Valve
PUF-PST2	15" Inch Supply Tube
PUF-SL48	48" Inch Hose With Tank Nut
PUWAND	Foamer Wand
PWA4-NB	Trigger Valve/Foam Nozzle Complete Without Hose Barb
SSC38	Stainless Hose Clamp
WAAD-.5	Wadding For Spray Gun
WAAD-.625	Wadding For Wand

WARNING: This unit is intended only for the application of Nox-Crete products. Consult the Product Data Sheet for proper protective wear for use. Read the Product MSDS before use. Never point the discharge spray wand at anyone. Depressurize the unit after use. Never carry the tank by the hose, wand or unlocked pump handle.